

Tabular Data Sheet

LX Series Split System Air Conditioners

13.4 SEER2 – R-454B – 3 Phase – 3 to 5 Nominal Ton

Models: XC336 to 60

Physical and electrical data

Model		XC336E3S11	XC348E3S11	XC360E3S11	XC336E4S11	XC348E4S11	XC360E4S11	XC336E5S11	XC348E5S11	XC360E5S11
Unit supply voltage		230 V, 3 ϕ , 60 Hz			460V, 3 ϕ , 60Hz			575V, 3 ϕ , 60Hz		
Normal voltage range ¹ (V)		187 to 252			432 to 504			540 to 630		
Minimum circuit ampacity (A)		16.9	18.9	24.0	6.9	8.1	10.8	6.0	7.8	8.6
Maximum overcurrent device (A) ²		25	30	40	15	15	15	15	15	15
Minimum overcurrent device (A) ³		20	20	25	15	15	15	15	15	15
Compressor	Type ⁴	Scroll	Scroll	Scroll	Scroll	Scroll	Scroll	Scroll	Scroll	Scroll
	Rated load (A)	12.8	14.3	18.3	5.1	6.0	8.2	4.5	5.8	6.4
	Locked rotor (A)	97.5	120.4	156.4	44.3	49.4	69.0	27.1	41.0	47.8
Crankcase heater		No	No	No	No	No	No	No	No	No
Factory external discharge muffler		No	No	No	No	No	No	No	No	No
Hard start kit required with TXV ⁵		No	No	No	No	No	No	No	No	No
Fan diameter (in.)		18	24	26	18	24	26	18	24	26
Fan motor	Rated HP	1/4	1/4	1/4	1/4	1/4	1/4	1/4	1/4	1/4
	Rated load (A)	1.33	1.30	1.30	0.69	0.65	0.65	0.53	0.60	0.60
	Nominal RPM	1100	850	850	1100	850	850	1100	850	850
	Nominal CFM	2575	3500	4300	2575	3500	4300	2575	3500	4300
Coil	Face area (sq ft)	13.84	18.7	23.33	13.84	18.7	23.33	13.84	18.7	23.33
	Rows deep	1	1	1	1	1	1	1	1	1
	Fins per inch	23	23	23	23	23	23	23	23	23
Liquid refrigerant piping OD (field-installed)		3/8	3/8	3/8	3/8	3/8	3/8	3/8	3/8	3/8
Vapor refrigerant piping OD (field-installed) ⁶		3/4	7/8	1 1/8†	3/4	7/8	1 1/8†	3/4	7/8	1 1/8†
Unit charge (lb - oz) ⁷		2-14	3-4	3-10	2-14	3-4	3-10	2-14	3-4	3-10
Charge (oz/ft)		0.57	0.60	0.67	0.57	0.60	0.67	0.57	0.60	0.67
Operating weight (lb)		140	230	255	140	230	255	140	230	255

1. Rated in accordance with AHRI Standard 110-2012, utilization range A.

2. Dual element fuses or HACR circuit breaker. Maximum allowable overcurrent protection.

3. Dual element fuses or HACR circuit breaker. Minimum recommended overcurrent protection.


4. Rotary compressor models are limited to an equivalent length of refrigerant piping of 100 ft with no exceptions.

5. Refer to the *Hard Start Kit Accessory Installation Manual* for the hard start kit part number for each model. The hard start kit is a field-installed accessory.

6. For applications with non-standard vapor line sizes, refer to the *Applications and accessories* section in the *Technical Guide*.

7. The unit charge is correct for the outdoor unit, smallest matched indoor unit, and 15 ft of refrigerant tubing. For tubing lengths other than 15 ft, add or subtract the amount of refrigerant, using the difference in actual refrigerant piping length (not the equivalent length) multiplied by the per foot value.

† The adapter fitting must be field-installed for the required 1 1/8 in. refrigerant piping.

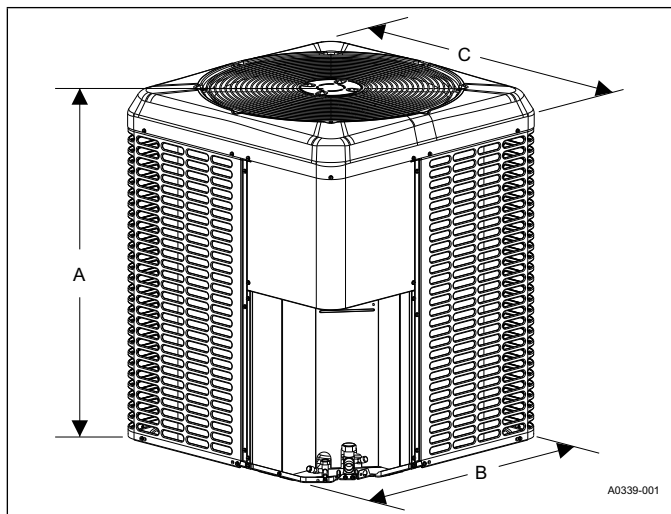

Dimensions

Unit model	Dimensions (in.)			Refrigerant connection service valve size (in.)	
	A	B	C	Liquid	Vapor
XC336E3S11	36 1/4	24	24	3/8	3/4
XC336E4S11					
XC336E5S11					
XC348E3S11	33 1/4	35 1/4	31 3/4		7/8
XC348E4S11					
XC348E5S11					
XC360E3S11	36 1/4	38	34 1/4		7/8 [‡]
XC360E4S11					
XC360E5S11					

Notes:

† Adapter fitting must be field-installed for the required 1 1/8 in. refrigerant piping.

All dimensions are in inches and are subject to change without notice.

Overall height is from the bottom of the base pan to the top of the fan guard.

Overall length and width include screw heads.

System charge for various matched systems

Outdoor unit	XC336E3S11	XC336E4S11	XC336E5S11	XC348E3S11	XC348E4S11	XC348E5S11	XC360E3S11	XC360E4S11	XC360E5S11
Required indoor metering device ^{1,2}	5C1	5C1	5C1	5C1	5C1	5C1	5C1	5C1	5C1
Indoor unit ^{3,4,5}	Additional charge (oz)								
JHE18B**B	—	—	—	—	—	—	—	—	—
JHE24B**C	—	—	—	—	—	—	—	—	—
JHE30B**D	—	—	—	—	—	—	—	—	—
JHE36(B,C)**D	12	12	12	—	—	—	—	—	—
JHE42C**F	—	—	—	—	—	—	—	—	—
JHE48(C,D)**G	—	—	—	16	16	16	—	—	—
JHE60(C,D)**H	—	—	—	—	—	—	23	23	23
JHC18B**B	—	—	—	—	—	—	—	—	—
JHC24B**C	—	—	—	—	—	—	—	—	—
JHC36(B,C)**D	12	12	12	—	—	—	—	—	—
JHC42(C,D)**F	—	—	—	—	—	—	—	—	—
JHC48(C,D)**G	—	—	—	16	16	16	—	—	—
JHC60(C,D)**H	—	—	—	—	—	—	23	23	23
CT(F,M,U)18A**A	—	—	—	—	—	—	—	—	—
CTF18B**A	—	—	—	—	—	—	—	—	—
CT(F,M,U)24A**B	—	—	—	—	—	—	—	—	—
CT(F,M)24B**B	—	—	—	—	—	—	—	—	—
CTF30A**D	—	—	—	—	—	—	—	—	—
CT(F,M,U)30B**C	—	—	—	—	—	—	—	—	—
CT(F,M)30C**C	—	—	—	—	—	—	—	—	—
CT(F,M,U)36B**D	12	12	12	—	—	—	—	—	—
CTF36B**E	14	14	14	—	—	—	—	—	—
CT(F,M)36C**D	12	12	12	—	—	—	—	—	—
CTF42C**E	14	14	14	—	—	—	—	—	—
CTM42C**E	14	14	14	—	—	—	—	—	—
CT(F,M,U)48C**F	—	—	—	12	12	12	—	—	—
CT(F,M)48D**F	—	—	—	12	12	12	—	—	—
CT(F,M,U)60C**G	—	—	—	16	16	16	19	19	19
CT(F,M,U)60D**G	—	—	—	16	16	16	19	19	19
CT(F,M)60C**H	—	—	—	—	—	—	23	23	23
CT(F,M,U)60D**H	—	—	—	—	—	—	23	23	23

Note: Some of the combinations shown in this table require advanced main air circulating fan indoor product. For approved coil only matches, refer to the *Cooling capacity - upflow, downflow, and horizontal furnaces and coils* table in the *Technical Guide*.

- For applications that require a TXV, use S1-1TVM*** series kit.
- Use a TXV kit with these indoor units to obtain system performance.
- Systems matched with furnaces or air handlers not equipped with blower-off delays may require blower time delay.
- Do not use CTF, CTU, or CXF coils in horizontal applications. CTM coils can be used in horizontal, upflow or downflow applications.
- Charge adders shown above do not indicate that coils are rated for every application. Refer to the performance data tables in the *Technical Guide* for actual performance for specified system matches. Obtain certified system ratings from www.ahridirectory.org.

Charging

- Check the factory unit charge listed on the unit nameplate to verify the refrigerant charge for the outdoor unit, the smallest matched indoor unit, and the 15 ft of inter-connecting refrigeration piping.
- Verify the indoor metering device and additional charge required for the specific matched indoor unit in the system using the table above.
- Add additional charge for the amount of interconnecting refrigeration piping greater than 15 ft at the rate specified in the *Physical and electrical data* table.
- For installations requiring additional charge, weigh in refrigerant for the specific matching indoor unit and actual refrigeration piping length.
- After weighing in the charge adders for the matched indoor unit and refrigeration piping, verify the system operation against the temperatures and pressures in the charging chart for the outdoor unit. Locate the charging charts on the outdoor unit and also in the *Service Data Application Guide* on www.simplygettingthejobdone.com. Follow the subcool or superheat charging procedure in the *Installation Manual* according to the type of indoor metering device in the system, and allow 10 min after each charge adjustment for the system operation to stabilize. Record the charge adjustment made to match the charging chart.
- Permanently stamp the unit nameplate with the total system charge defined as follows: total system charge = base charge (as shipped) + charge adder for matched indoor unit + charge adder for actual refrigeration piping length + charge adjustments to match the charging chart.